




# V12 VENTILATOR INSTRUCTIONS

## ASSEMBLY INSTRUCTIONS FOR V12 VENTILATOR


### Step 1

Insert V12 Ventilator into pocket on the back of hood. Snap ventilator in place with buttons.

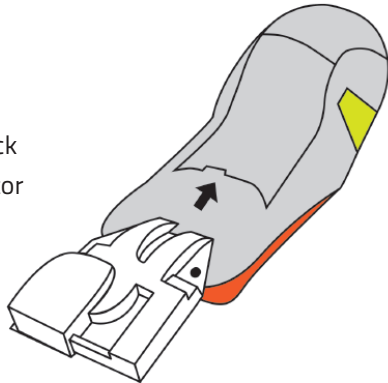

### Step 2


From the inside of hood, locate strap (A) and fasten to velcro on bottom of V12 Ventilator. Adjust to preference.

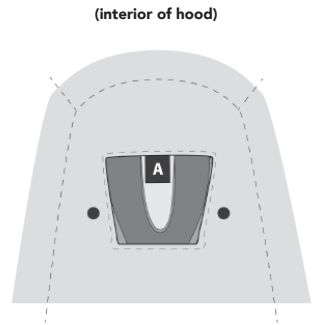

## BATTERY CHANGING INSTRUCTIONS FOR V12 VENTILATOR

### Step 1

The battery holder (A) is attached to the V12 Ventilator with velcro. Gently remove to access batteries.

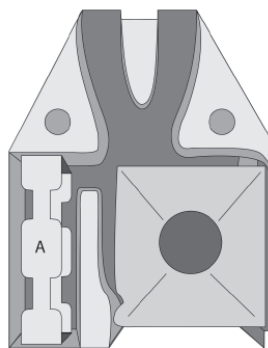

### Step 2

Remove old batteries and recycle where possible. Insert new batteries in correct position and replace holder in ventilator.

