

SIZING CHART

385-FRSJ

AR/FR Dual Certified Straight Fit Stretch Jeans

WAIST	30	32	34	36	38	40	42	44	46	48	50	52	54
Α	30	32	34	36	38	40	42	44	46	48	50	52	54
В	36	38	40	42	44	46	48	50	52	54	56	58	60

INSEAM	30	32	34	36		
С	29-30	31–32	33-34	34-36		
HEIGHT	5'6"-5'8"	5'8"-6'	6'-6'4"	6'4"-6'8"		

Measurements are in inches.


Size charts should be used as a measuring guide only. If your measurement falls between sizes, buy the larger size. Garments will vary according to style and fit of the garment.

How to Measure:

WAIST (A): Align top of edge of waistband in a straight line. Measure across opening from side to side at top edge of constructed waistband or waistline. Take measurement x2.

SEAT (B): Measure around the fullest part of your hips.

INSEAM (C): With garment laying flat, measure from crotch seam following contour of seam to finished edge of garment at hem.

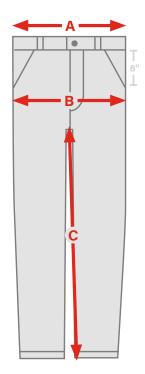

PIP GLOBAL SAFETY

PROTECTIVE INDUSTRIAL PRODUCTS, INC. 800-262-5755 | www.pipusa.com